


保温盖安装说明书 Installation Manual for Solar Cover

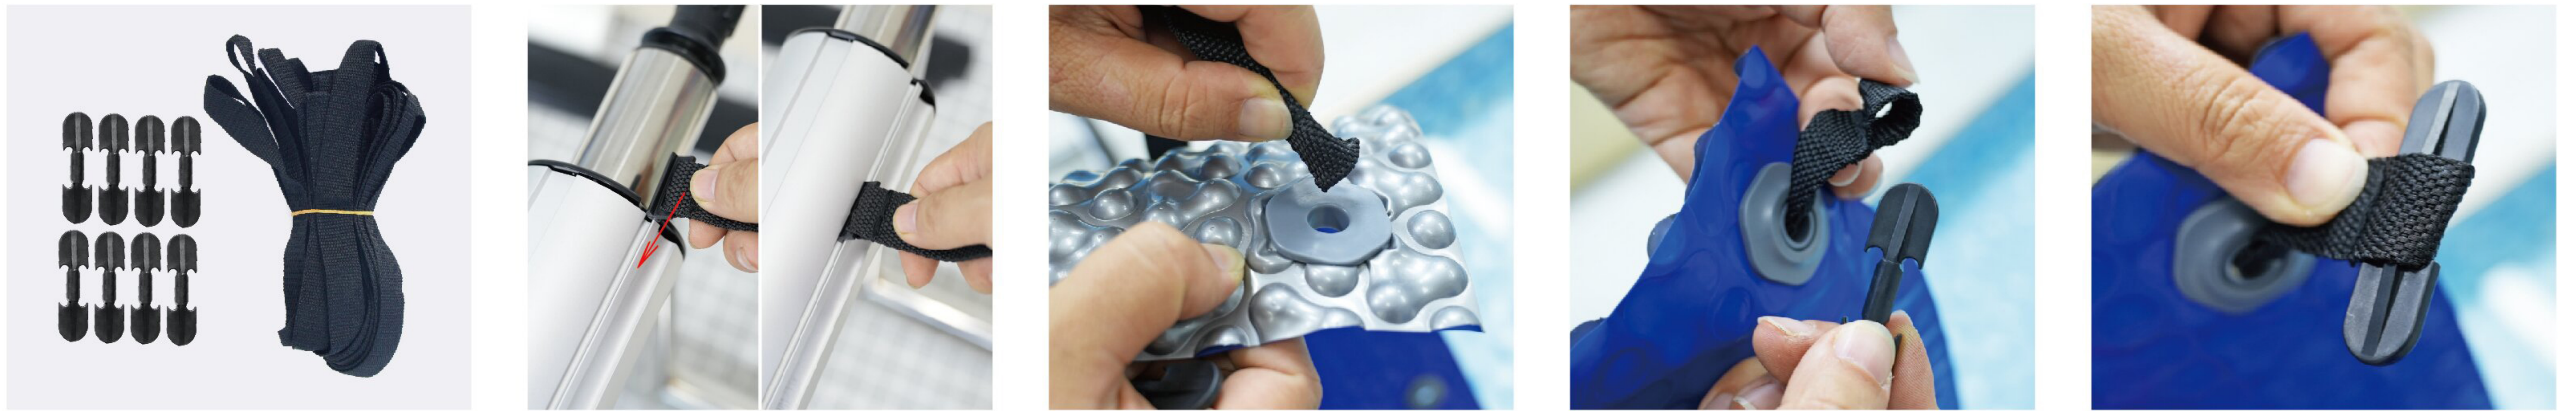

1. 黑色织带卡扣一端插入卷管卡槽位，根据需求插入数量。使用打孔器在盖布上打孔，装上眼扣并压紧。黑色织带另一端穿过盖布眼扣，用船桨塑料件固定其中，牢固稳定，依次步骤安装。

Insert one end of the black webbing into the slot of the reel tube, according to the required number of insertions. Use a hole punch to punch holes in the cover fabric, attach eyelets and press. The other end of the black webbing goes through the eyelet of the cover cloth, and is fixed with the oar-shaped plastic, which is firm and stable. Follow the steps in order to complete the installation.

② 安装完成如下效果图。

2. Installation is completed as shown below.

